


UIP software (version 5 or higher)
and
USB Cable Driver

are downloadable at
<https://senseair.com/download>

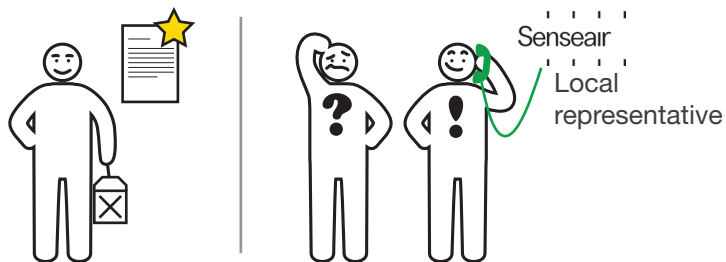

Senseair AB (headquarter)


Stationsgatan 12, Box 96, 824 08 Delsbo, Sweden
Phone: +46-653 - 71 77 70
senseair.com

IMA0298
Rev 6




Installation manual
SADK S8

Senseair Development Kit S8

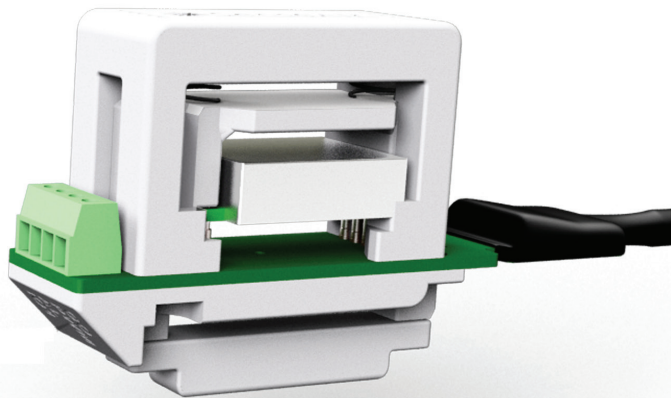

1

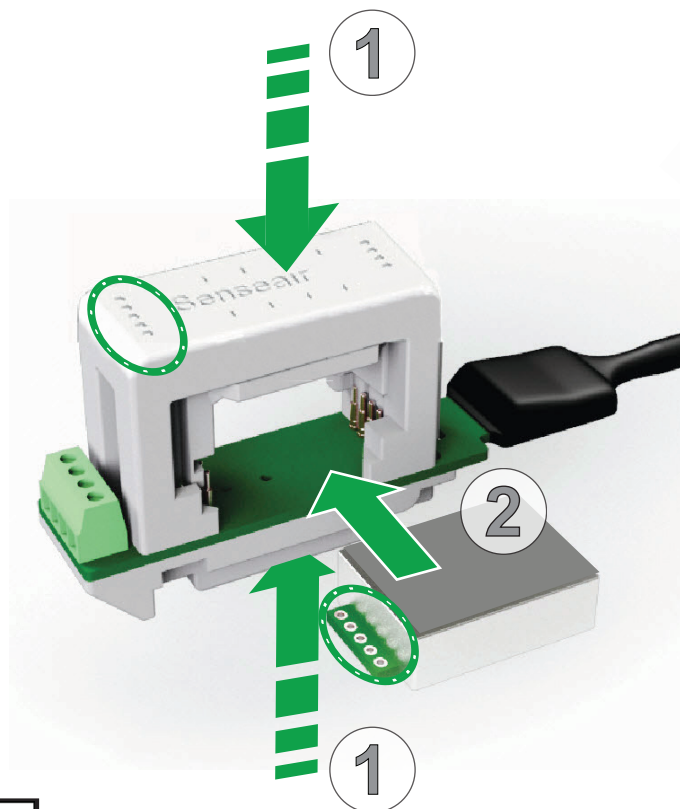

2

