

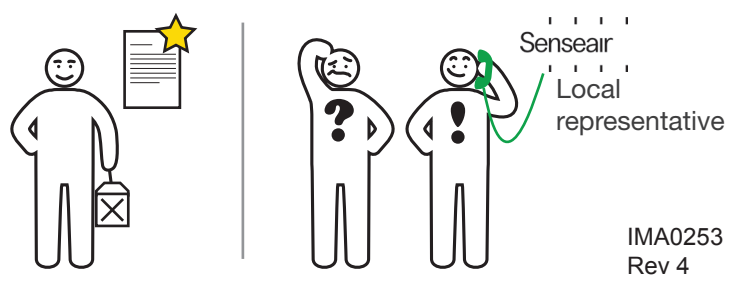


Installation manual SADK Interface



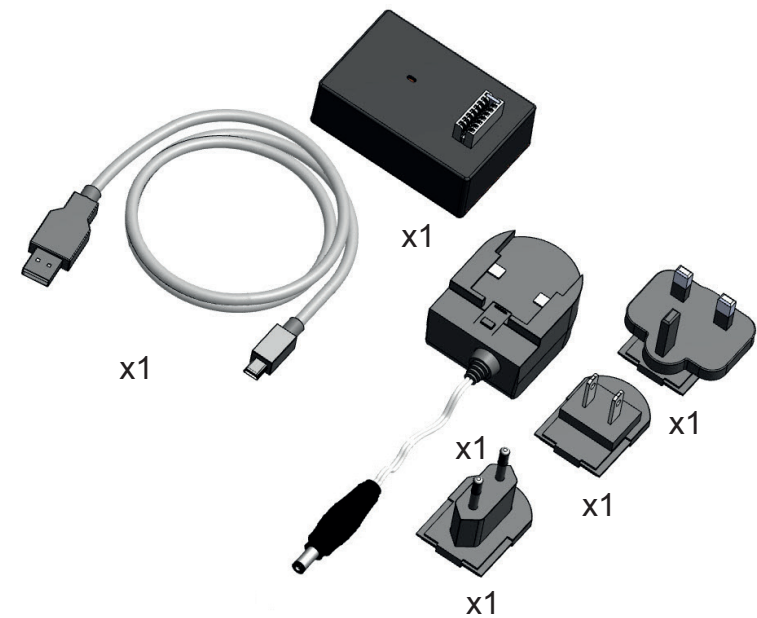


IMA0253
Rev 4

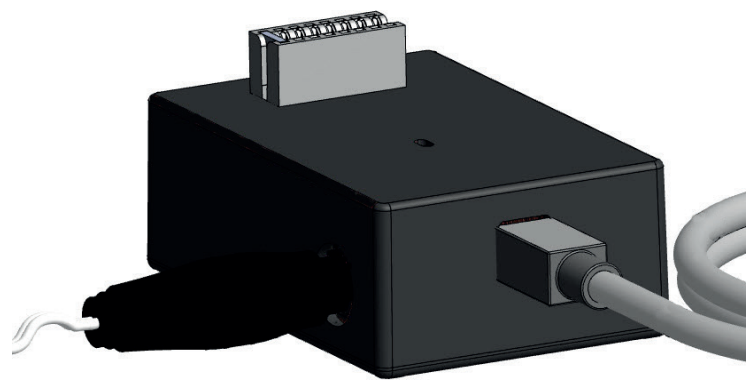


1



- 1 Download UIP software and USB Cable Driver at <https://senseair.com/download>
- 2 Run the UIP software
- 3 Check for updates

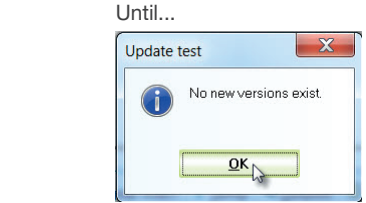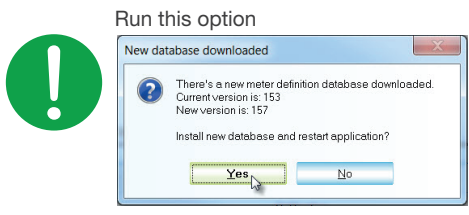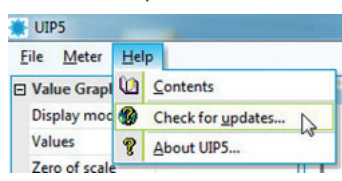


2

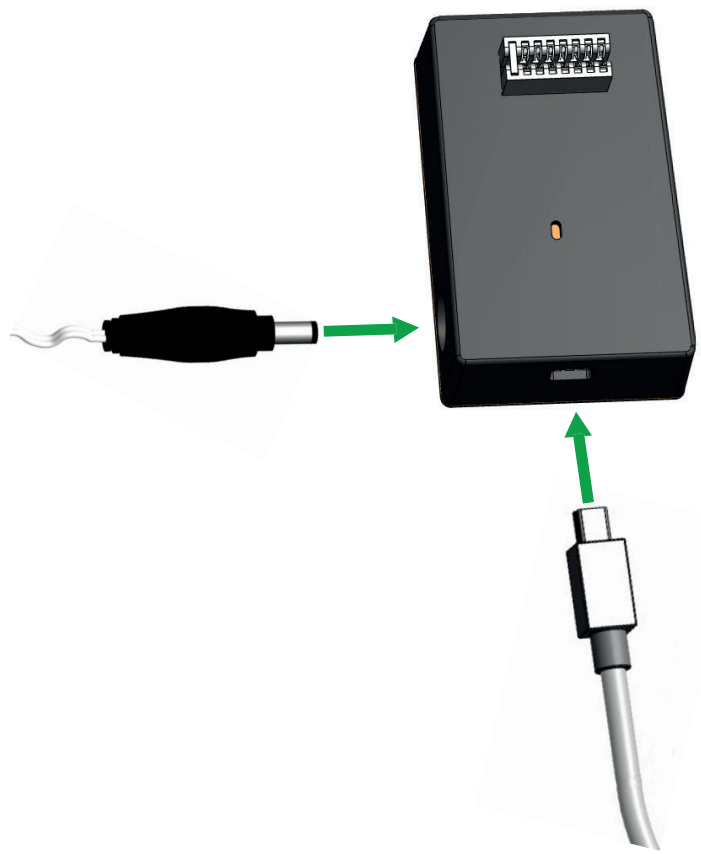


3

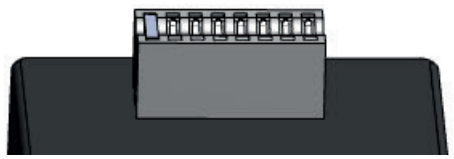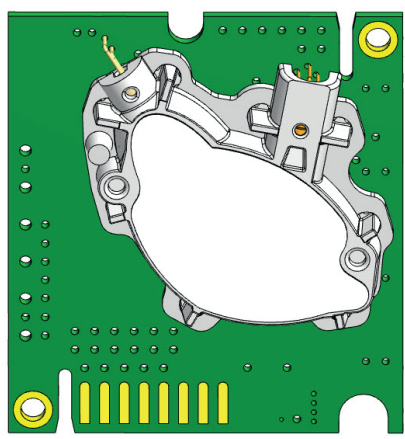

4

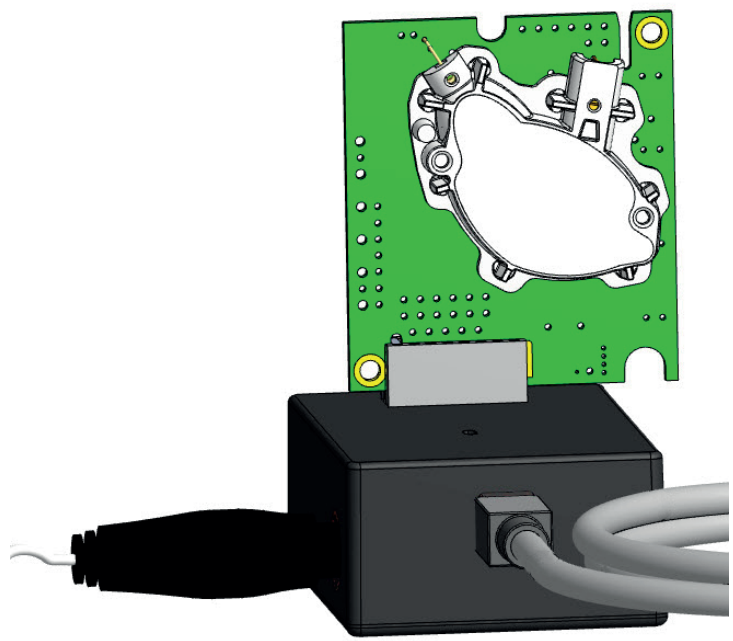

5

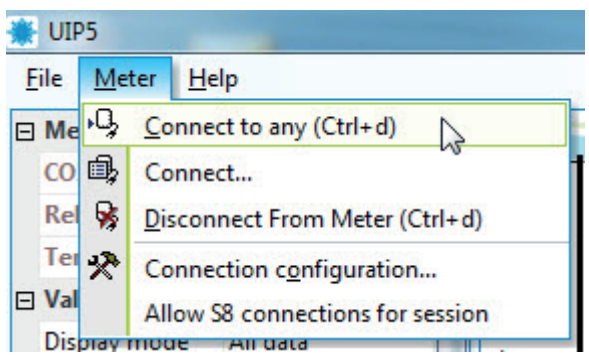

6

For more information see Help in the UIP5 program!

