

Power factor monitoring (cosφ) in 1- or 3-phase mains

G4CM690V16ATL20 Part No. 2394600

Loadmonitors - GAMMA series

Monitoring of inductive and capacitive consumers

Multifunction

Temperature monitoring of the motor winding

Reset-key, Fault latch

Recognition of disconnected consumers as "good" or "fault" state

Suitable for VFI (10 to 100Hz)

Supply voltage selectable via power modules

2 change over contacts

Width 45mm

Industral design

Read and understand these instructions before installing, operating or maintaining the equipment.



Never carry out work on live parts! Danger of fatal injury! The product must not be used in case of obvious damage. To be installed by an authorized person.

Technical data

1. Functions

Load monitoring $(cos\phi)$ of inductive and capacitive consumers in 1- or 3-phase mains with adjustable thresholds (cosφ1, cosφ2), timing for start-up supression and tripping delay separately adjustable, selectable fault latch, temperature monitoring of the motor winding with max. 6 PTC, reset-key and the following functions which are selectable by means of rotary switch:

2MIN Minimum monitoring

2MIN+I< ON Minimum monitoring and recognition of

disconnected consumers (relay ON if I<) 2MIN+I< Inv. Minimum monitoring and recognition of

disconnected consumers (relay OFF if I< Inv.)

2MAX Maximum monitoring

2MAX+I< ON Maximum monitoring and recognition of

disconnected consumers (relay ON if I<) 2MAX+I< Inv. Maximum monitoring and recognition of

disconnected consumers (relay OFF if I< Inv.) Monitoring the window between MIN and MAX WIN

WIN+I< ON Monitoring the window between MIN and MAX and recognition of disconnected consumers

WIN+I< Inv. Monitoring the window between MIN and MAX

and recognition of disconnected consumers

(relay OFF if I< Inv.)

MIN/MAX Minimum- and maximum monitoring Minimum- and maximum monitoring and MIN/MAX+I< ON recognition of disconnected consumers

(relay ON if I<)

MIN/MAX+I< Inv. Minimum- and maximum monitoring and

recognition of disconnected consumers

(relay OFF if I< Inv.)

2. Time ranges

Adjustment range Start-up suppression time: 180s Tripping delay: 1s

3. Indicators

Green LED U/t ON: indication of supply voltage Green LED U/t flashes: indication of start-up suppression time Yellow LED I=0 ON/OFF: indication of disconnected consumers indication of failure of the corresponding Red LFD Failure ON: threshold coso1 or/and coso2

Red LED Failure flashes: indication of tripping delay of the corresponding threshold cosφ1 or/and

coso2

Red LED Temp ON/OFF: indication of overtemperature Yellow LED Rel 1 ON/OFF: indication of relay output Rel 1 Yellow LED Rel 2 ON/OFF: indication of relay output Rel 2

4. Mechanical design

Self-extinguishing plastic housing, IP rating IP40 Mounted on DIN-Rail TS 35 according to EN 60715

Mounting position:

Shockproof terminal connection according to VBG 4 (PZ1 required),

IP rating IP20

Tightening torque: max. 1Nm Terminal capacity:

with/without multicore cable end 1 x 0.5 to 2.5mm² 1 x 4mm² without multicore cable end 2 x 0.5 to 1.5mm² with/without multicore cable end 2 x 2.5mm² flexible without multicore cable end

5. Input circuit

Supply voltage:

12 to 500V a.c. terminals A1-A2 (galvanically seperated) selectable via power module type TR3 according to specification of power module Tolerance:

Rated frequency: according to specification of power module Rated consumption: 3.5VA (3W) Duration of operation: 100% Reset time: 500ms

Ripple and noise:

>30% of the supply voltage Drop-out voltage: Overvoltage category: III (in accordance with IEC 60664-1)

Rated surge voltage:

6. Output circuit

2 potential free change over contacts Rated voltage: 250V a.c.

Switching capacity: 1250VA (5A / 250V a.c.) If the distance between the devices is less than 5mm! Rated voltage: 2000VA (8A / 250V a.c.) If the distance between the devices is greater than 5mm!

5A fast acting Fusing: Mechanical life: 20 x 106 operations

2 x 105 operations at 1000VA resistive load Electrical life: Switching capacity: max. 60/min at 100VA resistive load

max. 6/min at 1000VA resistive load (in accordance with IEC 60947-5-1)

Withstand voltage across open contacts:

 $1000V_{\rm eff}$ a.c.

Overvoltage category: III (in accordance with IEC 60664-1)

Rated surge voltage:

7. Measuring circuit

Measuring ranges: reversible between 8A (4,8kW)

and 16A (19,6kW) Wave form:

AC Sinus: 10 to 100Hz Measuring input voltage: terminals L1-L2-L3 1-phase load: 85 to 690V a.c.

3~ 85 to 690/400V 3-phase load: Overload capacity: 1-phase load: 796V a.c.

3-phase load: 3~ 796/460V a.c. $1.25M\Omega$ Input resistance: Measuring input current: terminals i-k Measuring range 8A: 1 to 8A

2 to 16A (for I>16A distance >5mm) Measuring range 16A: Overland capacity:

20A permanent

128A (8x16A) maximum 7 seconds. Cooldown for minimum 2 minutes!

G4CM690V16ATL20

Part No. 2394600

I< - recognition:

Current flow interruption:

Technical data

Measuring range 8A: 200mA Measuring range 16A: 400mA

Current flow recognition:

Measuring range 8A: 240mA Measuring range 16A: 480mA

Switching threshold:

Switching threshold $\cos\phi 1$: 0.3 to 1 (inductive) 1 to 0.3 (capacitive) Switching threshold $\cos\phi 2$: 0.3 to 1 (inductive) 1 to 0.3 (capacitive) 1 to 0.3 (capacitive) approx. 5% ($\cos\phi$)

Temperature monitoring:

Terminals: T1-T2 (max. 6 PTC)

Initial resistance: <1.5k Ω Response value (Relais in on-position): \geq 3.6k Ω Release value (Relais in off-position): \leq 1.8k Ω Disconnection (short circuit thermistor): no

Measuring voltage T1-T2: ≤7.5V at R ≤4.0kΩ

(in accordance with EN 60947-8)

Overvoltage category: III (in accordance with IEC 60664-1)

Rated surge voltage: 4kV

8. Control contact Y (equipotential with measuring circuit)

Function: latch (terminal Y1-Y2 bridged)

Loadable: no Control pulse length: -

Reset: normally closed contact in the input circuit

9. Accuracy

Base accuracy: ±3% (of maximum scale value)

Frequency response: ±0.025% / Hz

Adjustment accuracy: ≤5% (of maximum scale value)

Repetition accuracy: ±2%

Voltage influence:

Temperature influence: ≤0.02% / °C

10. Ambient conditions

Ambient temperature: -25 to +55°C

(in accordance with IEC 60068-1)

-25 to +40°C (in accordance with UL 508)

Storage temperature: -25 to +70°C
Transport temperature: -25 to +70°C
Relative humidity: -25 to +70°C
15% to 85%

(in accordance with IEC 60721-3-3

class 3K3)

Pollution degree: 2 (in accordance with EN 60255-27)
Vibration resistance: class 1 (in accordance with EN 60255-22-1)

Shock resistance: class 1 (in accordance with EN 60255-22-1)

Functions

When the supply voltage U is applied (green LED U/t illuminated) the output relays Rel 1 and Rel 2 switches into on-postion (yellow LED Rel 1 and Rel 2 illuminated) and the set interval of the start-up suppression time (Start) begins (green LED U/t flashes). Changes of the measured power factor during this period don't affect the state of the output relays Rel 1 and Rel 2. After the interval has expired the green LED U/t illuminates steadily.

Applies to all cases of applications: The adjusted threshold $\cos \varphi 1$ always has to be adjusted more to the right than $\cos \varphi 2$. Otherwise both output relays switch into off-position (both red LEDs Failure flash alternately). The following specifications should avoid incorrect settings:

Monitoring of inductive loads: Both thresholds have to be adjusted in the left half (IND) of the cosφ-scale.

Monitoring of capacitive loads: Both thresholds have to be adjusted in the right half (KAP) of the cosφ-scale.

Monitoring of loads that can be both inductive as well as capacitive: $cos\phi1$ has to be adjusted in the right half (KAP) and $cos\phi2$ in the left half (IND) of the $cos\phi$ -scale


For the selection of the monitoring function it has to be taken into account that disconnected consumers effect that a measured $\cos \varphi = 1$ is assumed. A measured $\cos \varphi = 0.95$ up to 1 is assumed as $\cos \varphi = 1$ by the device.

Minimum monitoring (2MIN) for inductive loads

When the measured power factor falls below the value adjusted at the $\cos\phi$ 1-regulator (e.g. electronic load of motor drops), the set interval of the tripping delay (Delay) begins (red LED Failure of the corresponding threshold $\cos\phi$ 1 flashes). After the interval has expired (red LED Failure of the corresponding threshold $\cos\phi$ 1 illuminated), the output relay Rel 1 switches into off-position (yellow LED Rel 1 not illuminated).

When the measured power factor exceeds the value adjusted at the $cos\phi 2$ -regulator, the set interval of the tripping delay (Delay) begins (red LED Failure of the corresponding threshold $cos\phi 2$ flashes). After the interval has expired (red LED Failure of the corresponding threshold $cos\phi 2$ illuminated), the output relay Rel 2 switches into off-position (yellow LED Rel 2 not illuminated).

As soon as the measured power factor exceeds the adjusted value at the corresponding regulator $cos\phi1$ or $cos\phi2$ (red LED Failure of the corresponding threshold $cos\phi1$ or $cos\phi2$ not illuminated), the output relay Rel 1 or Rel 2 switches into on-position again (yellow LED Rel 1 or Rel 2 illuminated).

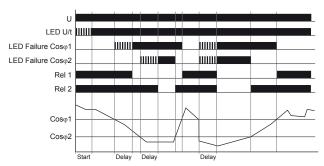

Minimum monitoring (2MIN) for capacitive loads


The function 2MIN can also be used to monitor capacitive loads. In this case the monitoring function doesn't applies if the power factor falls below the selected threshold but applies if the power factor falls below the corresponding phase angle.

Maximum monitoring (2MAX) for inductive loads

When the measured power factor exceeds the value adjusted at the $\cos\varphi 2$ -regulator (e.g. electronic load of motor increases), the set interval of the tripping delay (Delay) begins (red LED Failure of the corresponding threshold $\cos\varphi 2$ flashes). After the interval has expired (red LED Failure of the corresponding threshold $\cos\varphi 2$ illuminated), the output relay Rel 2 switches into off-position (yellow LED Rel 2 not illuminated).

When the measured power factor exceeds the value adjusted at the $cos\phi 1$ -regulator, the set interval of the tripping delay (Delay) begins (red LED Failure of the corresponding threshold $cos\phi 1$ flashes). After the interval has expired (red LED Failure of the corresponding threshold $cos\phi 1$ illuminated), the output relay Rel 1 switches into off-position (yellow LED Rel 1 not illuminated).

As soon as the measured power factor falls below the adjusted value at the corresponding regulator $\cos\phi 1$ or $\cos\phi 2$ (red LED Failure of the corresponding threshold $\cos\phi 1$ or $\cos\phi 2$ not illuminated), the output relay Rel 1 or Rel 2 switches into on-position again (yellow LED Rel 1 or Rel 2 illuminated).

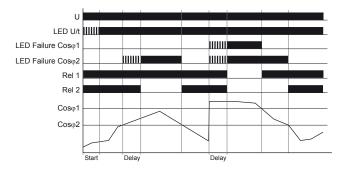


Maximum monitoring (2MAX) for capacitive loads

The function 2MAX can also be used to monitor capacitive loads. In this case the monitoring function doesn't applies if the power factor exceeds the selected threshold but applies if the power factor exceeds the corresponding phase angle.

Functions

Window function (WIN) for inductive loads

When the measured power factor falls below the value adjusted at the cosφ2-regulator (e.g. electronic load of motor drops), the set interval of the tripping delay (Delay) begins (red LED Failure of the corresponding threshold cosφ2 flashes). After the interval has expired (red LED Failure of the corresponding threshold cosφ2 illuminated), the output relays Rel 1 and Rel 2 switches into off-position (yellow LED Rel 1 and Rel 2 not illuminated). The output relays Rel 1 and Rel 2 switches into on-position again (yellow LED Rel 1 and Rel 2 illuminated), as soon as the the measured power factor exceeds the adjusted value at the coso2-regulator (red LED Failure of the corresponding threshold cosφ2 not illuminated). When the measured power factor exceeds the value adjusted at the cosφ1-regulator, the set interval of the tripping delay (Delay) begins (red LED Failure of the corresponding threshold cosφ1 flashes). After the interval has expired (red LED Failure of the corresponding threshold cosφ1 illuminated), the output relays Rel 1 and Rel 2 switches into offposition (yellow LED Rel 1 and Rel 2 not illuminated). As soon as the measured power factor falls below the value adjusted at the cosφ1regulator (red LED Failure of the corresponding threshold cosφ1 not illuminated) the output relays Rel 1 and Rel 2 switches into on-position again (yellow LED Rel 1 and Rel 2 illuminated).

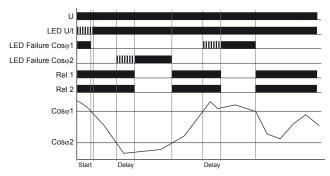

Window function (WIN) for capacitive loads


The function WIN can also be used to monitor capacitive as well as inductive/capacitive loads. In this case $\cos\phi 1$ monitors the more capcitive part and $\cos\phi 2$ the more inductive part of the window.

Within this window the output relays Rel1 and Rel2 remain in on-position. If the measured power factor falls below or exceeds the adjusted window both output relays switch into off-position.

Minimum- and maximum monitoring (MIN/MAX) for inductive loads

When the measured power factor falls below the value adjusted at the $cos\phi2\text{-regulator}$ (e.g. electronic load of motor drops), the set interval of the tripping delay (Delay) begins (red LED Failure of the corresponding threshold $cos\phi2$ flashes). After the interval has expired (red LED Failure of the corresponding threshold $cos\phi2$ illuminated), the output relay Rel 2 switches into off-position (yellow LED Rel 2 not illuminated). The output relay Rel 2 switches into on-position again (yellow LED Rel 2 illuminated), as soon as the the measured power factor exceeds the adjusted value at the $cos\phi2\text{-regulator}$ (red LED Failure of the corresponding threshold $cos\phi2$ not illuminated).

When the measured power factor exceeds the value adjusted at the $cos\phi1$ -regulator, the set interval of the tripping delay (Delay) begins (red LED Failure of the corresponding threshold $cos\phi1$ flashes). After the interval has expired (red LED Failure of the corresponding threshold $cos\phi1$ illuminated), the output relay Rel 1 switches into off-position (yellow LED Rel 1 not illuminated). As soon as the measured power factor falls below the value adjusted at the $cos\phi1$ -regulator (red LED Failure of the corresponding threshold $cos\phi1$ not illuminated) the output relay Rel 1 switches into on-position again (yellow LED Rel 1 illuminated).

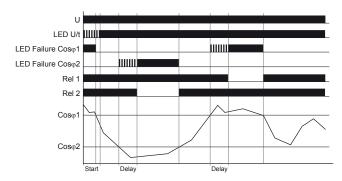

Minimum- and maximum monitoring (MIN/MAX) for capacitive loads

The function MIN/MAX can also be used to monitor capacitive as well as inductive/capacitive loads. In this case $cos\phi1$ monitors the more capcitive part and $cos\phi2$ the more inductive part of the window.

Within this window the output relays Rel1 and Rel2 remain in on-position. If the measured power factor falls below or exceeds the adjusted window both output relays switch into off-position.

Fault latch

The fault latch can be activated via bridge between the terminals Y1 and Y2 $\,$


If the fault latch is activated and a failure has occured (red LED of the corresponding threshold or red LED Temp illuminated), the failure can only be reset if no fault is active any more and by interrupting the supply voltage, by pressing the reset-key or by opening the bridge. After resetting the failure and re-applying to the supply voltage, the output relays Rel 1 and Rel 2 switch into on-position again and the measuring cycle begins with the set interval of the start-up suppression time (Start).

Note:

The fault latch remains active inspite of a I=0 recognition!


Example: Window function (WIN) - Resetting the fault latch by interrupting the supply voltage

WIN+L

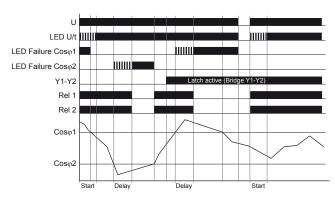


Example: Window function (WIN) - Resetting the fault latch by pressing the reset-key for minimum 1 second

WIN+L

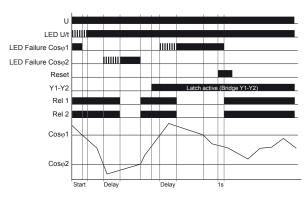

Example: Window function (WIN) - Resetting the fault latch by opening the bridge between Y1 and Y2

WIN+L

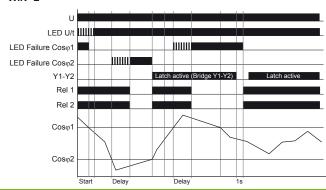

Functions


Recognition of disconnected consumers

The following applies for functions, where the I=0 recognition is activated: When the current flow between i and k is interrupted (yellow LED I=0 illuminated) and the minimum-, window- or minimum- and maximum function is activated (2MIN+I=0, WIN+I=0, MIN/MAX+I=0), the output relays Rel 1 and Rel 2 remains into on-position (yellow LED Rel 1 and LED Rel 2 illuminated).


When the maximum function is activated (2MAX+I=0), the output relays Rel 1 and Rel 2 switches into off-position (yellow LED Rel 1 and LED Rel 2 not illuminated).

When the current flow restores, the measuring cycle is restarted with the set interval of the start-up suppression time (Start) (green LED U/t flashes).

I=0 with minimum monitoring (2MIN+I=0)

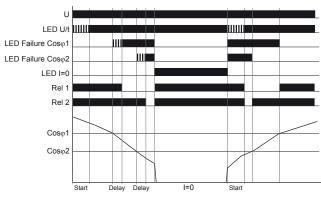

I=0 with maximum monitoring (2MAX+I=0)

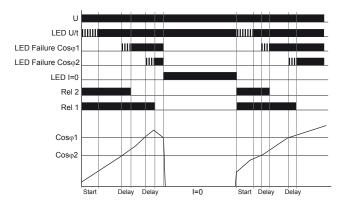

The following applies for functions, where the inverted I=0 recognition is activated:


When the current flow between i and k is interrupted (yellow LED I=0 illuminated), the output relays behaves inverse to the above mentioned function.

If the minimum-, window- or minimum- and maximum function (2MIN+I=0 Inv., WIN+I=0 Inv., MIN/MAX+I=0 Inv.) is activated, the output relays Rel 1 and Rel 2 switches into off-position (yellow LED Rel 1 and LED Rel 2 not illuminated).


When the maximum function is activated (2MAX+I=0 Inv.), the output relays Rel 1 and Rel 2 remains in on-position (yellow LED Rel 1 and LED Rel 2 illuminated).

When the current flow restores, the measuring cycle is restarted with the set interval of the start-up suppression time (Start) (green LED U/t flashes).

I=0 Inv. with minimum monitoring (2MIN+I=0 Inv.)

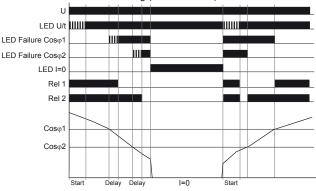


I=0 Inv. with maximum monitoring (2MAX+I=0 Inv.)

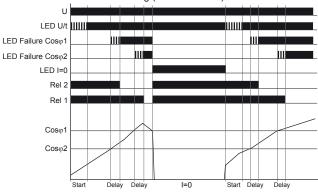


Temperature monitoring of the motor winding

If the supply voltage U is applied (green LED U/t illuminated) and the cumulative resistance of the PTC-circuit is less than $3.6 k\Omega$ (standard temperature of the motor), the output relay Rel 2 switches into on-position if no other failure is applied! When the comulative resistance of the PTC-circuit exceeds $3.6 k\Omega$ (at least one of the PTCs has reached the cutoff temperature), the output relay Rel 2 switches into off-position (yellow LED Rel 2 not illuminated) and a failure will be indicated (red LED Temp Illuminated). The output relay Rel 2 switches into on-position again (yellow LED Rel 2 illuminated) respectively the failure will be cancelled (red LED Temp not illuminated), if the cumulative resistance drops below $1.8 k\Omega$ by cooling down of the PTC. If the fault latch is activated, a press of th reset-key is required to cancel the temperature failure.

Temperature monitoring without fault latch

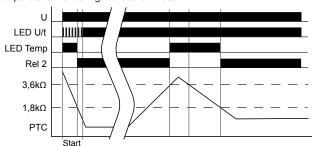

Temperature monitoring with fault latch

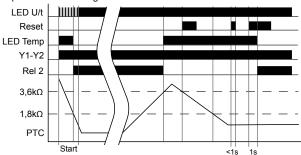


Note: If the output relay Rel 2 should switch into on-position again, no other failure should be applied!


Part No. 2394600

Connections


Connected 3~ 400/690V with power module 24V a.c. without fault latch I_N<16A

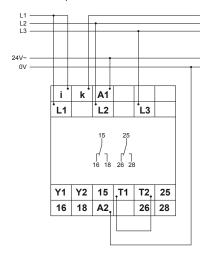


Connected $3\sim 500V$ with power module 500V a.c. with fault latch I_N <16A

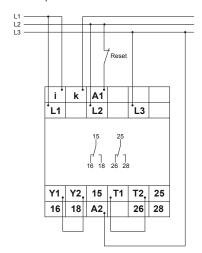

Connected 3~ 230/400V with power module 230V a.c. with fault latch and temperature monitoring sensor I_N <16A

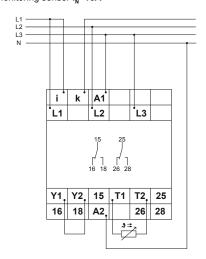


Connected 3~ 400/690V with power module 400V a.c. with fault latch and current transformer $\rm I_{\rm N}{>}16A$

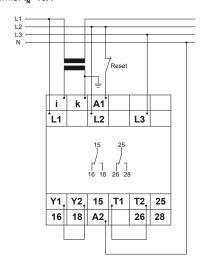


Note:

Before working on current transformer circuits, these shall be short-circuited.

Connected 1~ 230V with power module 24V a.c. without fault latch I_N <16A

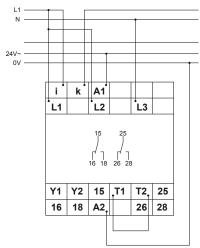

Dimensions

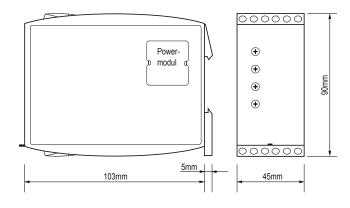



TELE Haase Steuergeräte Ges.m.b.H. Vorarlberger Allee 38 AT-1230 Vienna, AUSTRIA

RELEASE 2017/01

Subject to alterations and errors

