

### **DATASHEET**

# Single-Channel Superluminescent Diode Source Integrated Spectral Bench (ISB1)

Single-SLED Light Source, 1 SLED: 1430nm, SM Fiber,
High Degree of Polarization, Spectral Coverage: 1410nm – 1450nm,
FWHM: 40nm, CW: 1430nm, Light Output Power >10mW

**Luxmux Part Number: ASM002604** 





#### A. PRODUCT DESCRIPTION

The Single-SLED Integrated Spectral Bench (ISB1) product is a compact Superluminescent Diode (SLED) solution that employs Luxmux's high-performance Optical Spectral Engine (OSE) module. The ISB1 is a broadband light source that operates in the near infrared range. It is a turn-key product that can easily be integrated into existing devices that require light power.

The Single-SLED ISB1 includes an integrated isolator and a proprietary driver and controller, each of which enable the light power to easily be adjusted. A Graphical User Interface (GUI) with a USB, RS232 or Ethernet connection allows for external monitoring and adjustment capabilities. The Single-SLED ISB1's light output is powered by a standard FC/APC connector (FC/PC or SMA available upon request).

#### **B. KEY FEATURES**


- User-controlled box with one SLED enclosed
- Compact and user-friendly
- Centre wavelength (CW): 1430nm
- SLED can be run from 0% to 100% of maximum rating
- Output power: 10mW
- Bandwidth FWHM: 40nm
- Internally optimized for maximum coupling efficiency with smf-28e fiber

- Monolithic integration of a broadband dual stage PMF isolator (35dB)
- Includes a monitor photodiode
- Light output connector: FC/APC (optional: FC/PC or SMA)
- Multiple communication interfaces: USB, RS-232, Ethernet
- User-friendly GUI and custom API available for test automation
- Optional power meter available

#### C. APPLICATIONS

- Optical Component Testing
- Telecom Test Equipment
- Medical Optical Coherence Tomography
- Industrial Optical Coherence Tomography
- Fiber Optic Gyroscopes

- Metrology
- Biomedical Imaging Systems
- Optical Sensing
- White Light Interferometry
- Research and Development

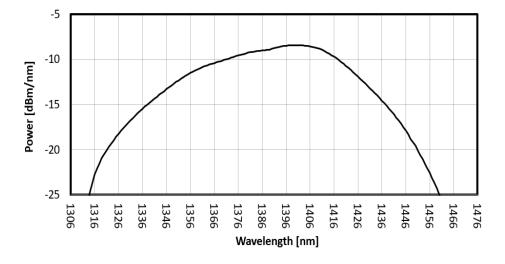







#LTC-ISB1-1430-SM-HP-1410\_1450-40-1430-10\_DS\_2021\_08\_05

This document is the property of Luxmux, and contains proprietary information. Luxmux reserves the right to make product design or specification changes without notice.



#### D. ABSOLUTE MAXIMUM RATINGS

Parameter	Symbol	Condition	Minimum	Maximum	Unit			
DRIVER POWER SUPPLY SPECIFICATIONS								
Input Power Supply Voltage	Vs	CW	10	14	V			
Input Power Supply Current	ls	CW	5	-	Α			
TEMPERATURE SPECIFICATIONS								
Case Temperature (see note 2)	$T_{Case}$		0	60	°C			
Storage Temperature (see note 4)	$T_{stg}$	No condensation, Unbiased	-40	85	°C			
Storage Humidity (see note 4)	RH <sub>stg</sub>		5	85	%RH			
Ambient Operating Temperature (See note 3)	Тор		0	50	°C			

#### Notes:

- 1. Please note that exceeding the Absolute Maximum Ratings above may cause device failure. Luxmux does not bear responsibility for laser power damage that is attributed to electrostatic discharge, excessive current levels, and current spikes (transients).
  - Any attempts to increase the laser drive current above the pre-set limits or recommended specification limits, can damage the device, and nullify the warranty period. It should be emphasized that the current limit set points cannot be exceeded.
- 2. For optimum performance of the Integrated Spectral Bench (ISB1), the ISB1 must be operated within the specified temperature ranges. The Single-SLED® has an internal thermoelectric cooler (TEC) to remove heat from the light source and dissipate it through the ISB1 case. It is required to provide free air circulation around the ISB1 device. It is always recommended to cool down the unit with a fan, and/or to mount the ISB1 on an appropriate heatsink, capable of dissipating up to 10W. The thermal resistance between ISB1 metal case and heatsink can be minimized by applying thermal grease, thermal glue or thermal pad between the contact surfaces. When the Single-SLED® is used without a heatsink, maximum ambient operating temperature is 40°C. The specification lists the operating temperature for the electrical/optical characteristics, which is the temperature of the ISB1 during the time that the specifications were measured. Variation in temperature beyond what is specified can have a significant effect on the optical characteristics, like changes in wavelength or drop in output power.
- 3. Storage temperature and relative humidity should be chosen so the dew point of the humid air around the package is below the storage temperature of the package, to avoid condensation inside the ISB1 enclosure.



### E. OPTICAL AND ELECTRICAL SPECIFICATIONS (see note 5)

Parameter	Symbol	Condition	Minimum	Typical	Maximum	Unit			
		/ER POWER SUPP	<u> </u>						
Input Power Supply Voltage	Vs	CW	10	12	14	V			
Input Power Supply Current	Is	CW	5	-	-	А			
Input Power Supply Voltage Ripple and Noise	γ	CW	-	-	200	mVpp			
OPTICAL SPECIFICATIONS									
Center Wavelength (see note 6)	CWL	$CW$ $T_{OP} = 25^{\circ}C$ $T_{TEC} = 21^{\circ}C$	1420	1430	1440	nm			
SM Fiber Coupled Power (see note 7)	Р	$CW$ $T_{OP} = 25^{\circ}C$ $T_{TEC} = 21^{\circ}C I_{OP}$	10	-	-	mW			
Bandwidth FWHM (see note 8)	Вғwнм	$CW$ $T_{OP} = 25^{\circ}C$ $T_{TEC} = 21^{\circ}C I_{OP}$	40	45	-	nm			
Bandwidth @ -10dB (see note 5)	B@10dB	$CW$ $T_{OP} = 25^{\circ}C$ $T_{TEC} = 21^{\circ}C I_{OP}$	-	90	-	nm			
Spectrum Ripple (see note 9)	R	CW T <sub>OP</sub> = 25°C T <sub>TEC</sub> = 21°C	< 0.15	< 0.30	< 0.45	dB			
Spectral Coverage	SC	$CW$ $T_{OSE2} = 25^{\circ}C$ $T_{TEC} = 21^{\circ}C I_{OP}$	-	1410 – 1450	-	nm			
Polarization Extinction Ratio (see note 10)	PER	$CW$ $T_{OP} = 25^{\circ}C$ $T_{TEC} = 21^{\circ}C$ $I_{OP}$	10	-	-	dB			
RIN	RIN		-	< -130	-	dB/Hz			
Power Stability (After 1h warm up)	P <sub>STAB</sub>	@25°C ± 1°C	-	< 0.1	-	dB			
Warmup Time	W		15	30	60	Min.			
		CONSTANT CUF	RRENT MODE						
Operating Current	I <sub>OP</sub>	$CW$ $T_{OP} = 25^{\circ}C$ $T_{TEC} = 21^{\circ}C$	-	-	350	mA			
Current Setting Resolution	R <sub>IOP_SET</sub>		-	-	0.1	mA			
SLED Current Reading Resolution	R <sub>IOP_READ</sub>		-	0.1	-	mA			



Parameter	Symbol	Condition	Minimum	Typical	Maximum	Unit		
		MODULATI	ON MODE					
Waveform			-	Square	-			
Modulation Frequency Range	$f_{mod}$		0.016	-	1000	Hz		
Duty Cycle	D		10	50	90	%		
		INTERNAL MO	NITOR DIODE					
Monitor Diode Current Reading	I <sub>mon</sub>		-	-	500	uA		
Monitor Diode Current Reading Resolution	RES <sub>Imon</sub>		-	7.6	-	nA		
LIGHT OUTPUT CONNECTOR								
Type of Fiber Connector			-	FC/PC, FC/APC, SMA	-			
		SLED TEC SPE	CIFICATIONS					
SLED TEC Temperature Setpoint	T <sub>SLED_SET</sub>		0	-	40	°C		
SLED TEC Temperature Setpoint Resolution	R <sub>TSLED_SET</sub>		-	0.1	-	°C		
SLED TEC Temperature Reading	T <sub>SLED_READ</sub>		-40	-	100	°C		
SLED TEC Temperature Reading Resolution	R <sub>TSLED</sub> _		-	0.1	-	°C		
		TEMPERATURE S	PECIFICATION	NS				
Heatsink Temperature Reading Range	T <sub>HS</sub>		-40	-	100	°C		
Heatsink Temperature Reading Resolution	R <sub>THS</sub>		-	0.1	-	°C		
		POWER	METER					
Spectral Response Range	$\lambda_{PM}$		900	-	1870	nm		
Photosensitive Area	A <sub>PM</sub>		-	Ф1	-	mm		
Power Meter Current Reading	P <sub>PM</sub>		50	-	-	uA		
Peak Sensitivity Wavelength	λр		-	1750	-	nm		
Photo Sensitivity	S	λ= λρ	0.9	1.1	-	A/W		
Typical Dark Current	I <sub>D</sub>		-	1	10	nA		
Detectivity	D*	λ= λρ	2 x 10 <sup>12</sup>	5.5 x 10 <sup>12</sup>	-	cm*Hz <sup>1/2</sup> /W		
Noise Equivalent Power	NEP	λ= λρ	-	1.5 x 10 <sup>-14</sup>	4 x 10 <sup>-14</sup>	W/Hz <sup>1/2</sup>		




Parameter	Symbol	Condition	Minimum	Typical	Maximum	Unit		
POWER METER TEC SPECIFICATIONS								
Power Meter TEC Temperature Setpoint	T <sub>PM_SET</sub>		-20	-	40	°C		
Power Meter TEC Temperature Setpoint Resolution	R <sub>TPM_SET</sub>		-	0.1	-	°C		
Power Meter TEC Temperature Reading	T <sub>PM_READ</sub>		-40	-	85	°C		
Power Meter TEC Temperature Reading Resolution	R <sub>TPM</sub> _		-	0.1	-	°C		

#### Notes:

- 5. There may be differences in typical values of output power, power stability, wavelength and bandwidth, due to coupling efficiency. These values are references and there is no guarantee that each particular ISB1 module will have EXACTLY the typical values shown on the previous chart.
- 6. Center Wavelength is defined as the center point of the 3dB bandwidth of the SLED.
- 7. The ISB1 uses a Dual Stage Isolator for back reflection protection. Isolators are used to protect a source from back reflections or signals that may occur after the isolator. Back reflections can damage a laser source or cause it to amplitude modulate, or frequency shift. In high-power applications, back reflections can cause instabilities and power spikes. Luxmux does not bear responsibility for laser power damage that is attributed to hot spots in the beam.
- 8. Single-SLED® FWHM is defined as the bandwidth from the lowest spectral dip, when the SLED is on.
- 9. Resolution of 0.1nm.
- 10. Polarization Extinction Ratio is defined as the ratio of optical powers of perpendicular polarizations, expressed in decibels (dB).



### **F. PLOTS** - Test performed at $T_{OP}$ =25°C and $T_{TEC}$ =21°C

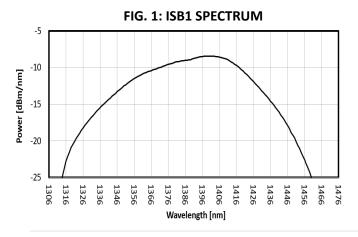



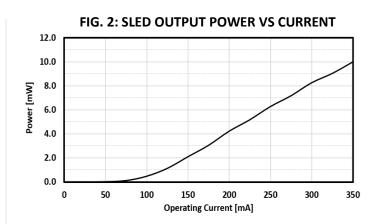


FIG. 3: ISB1 TYPICAL POWER STABILITY 0.1 Power Stability: 10log10(Pmax[mW]) - 10log10(Pmin[mW]) 0.08 0.06 0.04 Power Stability [dB] 0.02 -0.02 -0.04 -0.06 -0.08 -0.1 10 11 12 Time [hours]

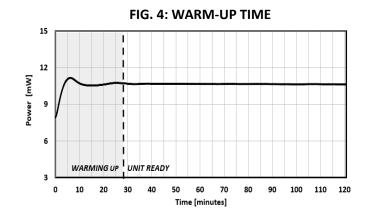


#### **G. CONNECTORS**



Item	Description
Α	FC/APC Connector (Optional: FC/PC, SMA)
В	Power Barrel Connector Jack 2.00mm ID, 5.50mm OD, 9.5 mm Length. Center Positive 🔾 🕒
	Input: AC 100-240V Output: 12V 5V min
С	USB 2.0 Type B
D	RJ45 for MODBUS TCP/IP Communication
E	D-SUB 9 Positions for RS-232 Communication
F	Switches to change between PC Mode - Manual Mode and to turn SLED on when operating in
	Manual Mode




### H. D-SUB CONNECTOR PIN OUT

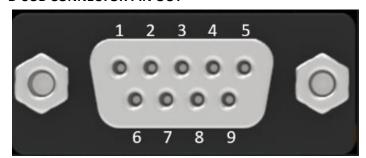

Pin #	Function RS-232
1	Not used
2	Тх
3	Rx
4	Not used
5	GND
6	Not used
7	Not used
8	Not used
9	Not used


### I. MANUAL CONTROL

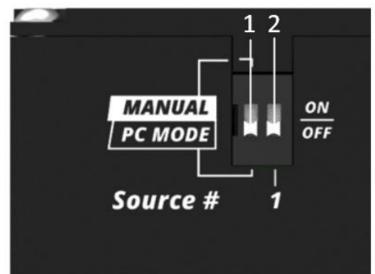

Pin#	UP	DOWN
1	Light Source in Manual Mode	Light Source in PC Mode
2	SLED ON	SLED OFF




### J. OSE1 14-PIN BUTTERFLY PACKAGE PIN OUT

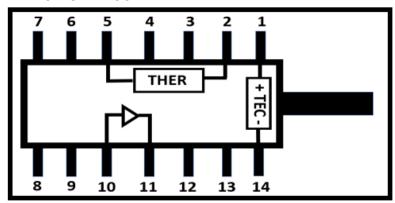

EXTERNAL PIN ASSIGNMENT							
1	TEC (+)	8	NC				
2	Thermistor	9	NC				
3	NC	10	SLED Anode (+)				
4	NC	11	SLED Cathode (-)				
5	Thermistor	12	NC				
6	NC	13	Case				
7	NC	14	TEC (-)				




### K. MECHANICAL DIAGRAM - STANDARD ISB1

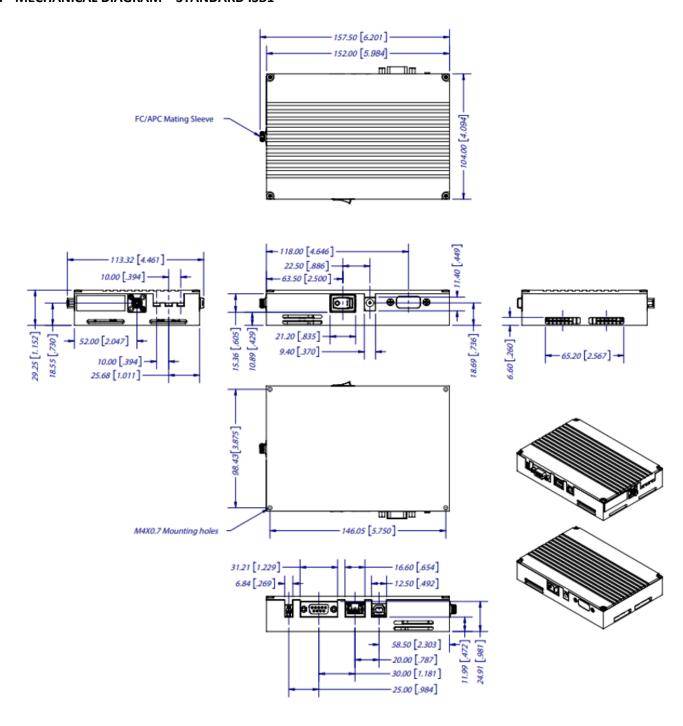



### L. MECHANICAL DIAGRAM – STANDARD ISB1 WITH POWER METER

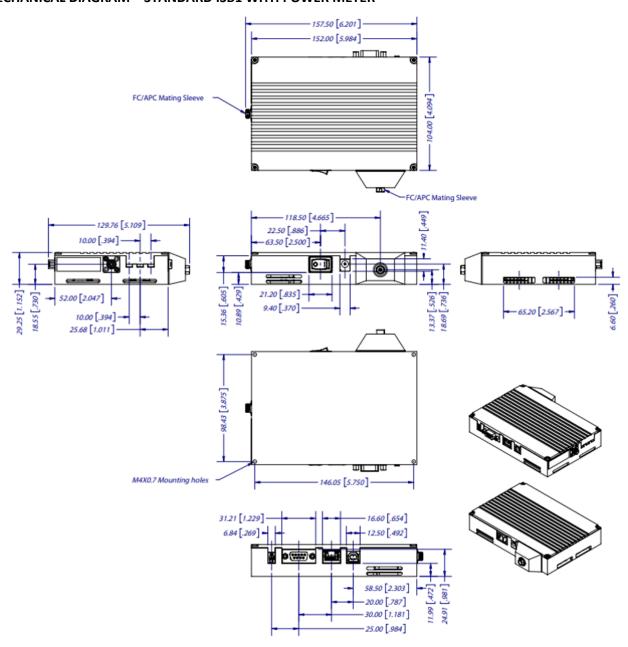



#### M. SAFETY

All statements regarding safety of operation and technical data will only apply when the unit is operated correctly.

The driver must not be operated in environments susceptible to explosion hazards. Do not obstruct the air ventilation slots. If any parts of the driver, or electronics are broken or exposed, contact Luxmux technical support and do not attempt to operate the unit.

The ISB1 a Class 1M laser product. It is safe for all conditions of use except when passed through magnifying optics such as microscopes and telescopes. It produces a beam that is divergent. If light is refocused use protective eye wear.

#### N. APPLICATION PROTOCOL INTERFACE (API)


Luxmux's driver utilizes the MODBUS Protocol for communications. Users can find numerous detailed specifications for the protocol on the internet. MODBUS is used widely in industrial applications. The driver is designed to use this protocol over all of its communication interfaces, MODBUS – RTU is a master/slave protocol and is employed by the USB or RS232 port, and MODBUS - TCP/IP is a client/server protocol and is employed by the Ethernet Interface.

The MODBUS specification has outlined how a user can adapt the overall packet structure to suit each interface requirement. The primary section of a MODBUS packet is known as the Protocol Data Unit (PDU) and it is independent of the underlying communication interface. The PDU includes additional byte fields for the MODBUS transaction per the Application Data Unit (ADU).

A high-level overview of MODBUS Protocol can be found on the ISB1 User Manual. If users want to develop their own API, the ISB1 Register Map is available upon request. Please contact technical support: techsupport@luxmux.com.



### O. ORDERING CODE

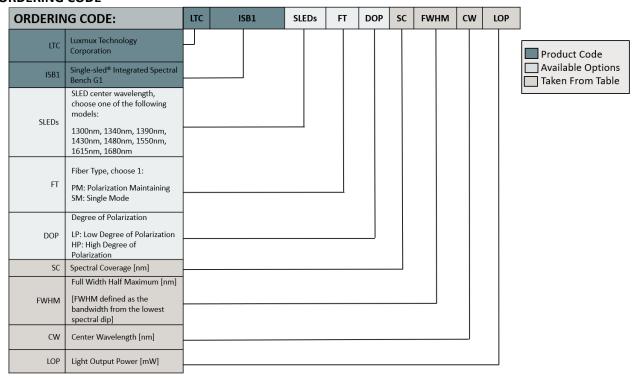

Part Number	Ordering Code: LTC-ISB1-{SLED}-(FT}-(DOP)-(SC)-(FWHM)-(CW)-(LOP)	SLED [nm]	FT	SC [nm]	FWHM [nm]	CW [nm]	LOP [mW]
ASM002501	LTC-ISB1-1300-PM-HP-1270_1330-60-1300-12	1300	PM	1270-1330	60	1300	12
ASM002502	LTC-ISB1-1340-PM-HP-1310_1370-60-1340-12	1340	PM	1310-1370	60	1340	12
ASM002503	LTC-ISB1-1390-PM-HP-1360_1420-60-1390-10	1390	PM	1360-1420	60	1390	10
ASM002504	LTC-ISB1-1430-PM-HP-1410_1450-40-1430-10	1430	PM	1410-1450	40	1430	10
ASM002505	LTC-ISB1-1480-PM-HP-1455_1505-50-1480-13	1480	PM	1455-1505	50	1480	13
ASM002506	LTC-ISB1-1550-PM-HP-1515_1585-70-1550-15	1550	PM	1515-1585	70	1550	15
ASM002507	LTC-ISB1-1615-PM-HP-1585_1645-60-1615-6	1615	PM	1585-1645	60	1615	6
ASM002508	LTC-ISB1-1680-PM-HP-1655_1705-50-1680-13	1680	PM	1655-1705	50	1680	8
ASM002509	LTC-ISB1-1550-PM-HP-1500_1600-70-1550-8	1550	PM	1500-1600	70	1550	8
ASM002512	LTC-ISB1-1550-PM-HP-1532_1568-35-1550-30	1550	PM	1532-1568	35	1550	30
Part Number	Ordering Code: LTC-ISB1-(SLED)-(FT)-(DOP)-(SC)-(FWHM)-(CW)-(LOP)	SLED [nm]	FT	SC [nm]	FWHM	cw	LOP
					[nm]	[nm]	[mW]
ASM002601	LTC-ISB1-1300-SM-HP-1270_1330-60-1300-12	1300	SM	1270-1330	[nm] 60	[nm]	[mW]
ASM002601 ASM002602	LTC-ISB1-1300-SM-HP-1270_1330-60-1300-12 LTC-ISB1-1340-SM-HP-1310_1370-60-1340-12	1300 1340	SM SM	1270-1330 1310-1370			
					60	1300	12
ASM002602	LTC-ISB1-1340-SM-HP-1310_1370-60-1340-12	1340	SM	1310-1370	60	1300 1340	12
ASM002602 ASM002603	LTC-ISB1-1340-SM-HP-1310_1370-60-1340-12 LTC-ISB1-1390-SM-HP-1360_1420-60-1390-10	1340 1390	SM SM	1310-1370 1360-1420	60 60 60	1300 1340 1390	12 12 10
ASM002602 ASM002603 ASM002604	LTC-ISB1-1340-SM-HP-1310_1370-60-1340-12 LTC-ISB1-1390-SM-HP-1360_1420-60-1390-10 LTC-ISB1-1430-SM-HP-1410_1450-40-1430-10	1340 1390 1430	SM SM SM	1310-1370 1360-1420 1410-1450	60 60 60 40	1300 1340 1390 1430	12 12 10 10
ASM002602 ASM002603 ASM002604 ASM002605	LTC-ISB1-1340-SM-HP-1310_1370-60-1340-12 LTC-ISB1-1390-SM-HP-1360_1420-60-1390-10 LTC-ISB1-1430-SM-HP-1410_1450-40-1430-10 LTC-ISB1-1480-SM-HP-1455_1505-50-1480-13	1340 1390 1430 1480	SM SM SM SM	1310-1370 1360-1420 1410-1450 1455-1505	60 60 60 40 50	1300 1340 1390 1430 1480	12 12 10 10 10
ASM002602 ASM002603 ASM002604 ASM002605 ASM002606	LTC-ISB1-1340-SM-HP-1310_1370-60-1340-12 LTC-ISB1-1390-SM-HP-1360_1420-60-1390-10 LTC-ISB1-1430-SM-HP-1410_1450-40-1430-10 LTC-ISB1-1480-SM-HP-1455_1505-50-1480-13 LTC-ISB1-1550-SM-HP-1515_1585-70-1550-15	1340 1390 1430 1480	SM SM SM SM	1310-1370 1360-1420 1410-1450 1455-1505 1515-1585	60 60 60 40 50	1300 1340 1390 1430 1480 1550	12 12 10 10 10 13
ASM002602 ASM002603 ASM002604 ASM002605 ASM002606 ASM002607	LTC-ISB1-1340-SM-HP-1310_1370-60-1340-12 LTC-ISB1-1390-SM-HP-1360_1420-60-1390-10 LTC-ISB1-1430-SM-HP-1410_1450-40-1430-10 LTC-ISB1-1480-SM-HP-1455_1505-50-1480-13 LTC-ISB1-1550-SM-HP-1515_1585-70-1550-15 LTC-ISB1-1615-SM-HP-1585_1645-60-1615-6	1340 1390 1430 1480 1550	SM SM SM SM SM SM	1310-1370 1360-1420 1410-1450 1455-1505 1515-1585 1585-1645	60 60 60 40 50 70	1300 1340 1390 1430 1480 1550 1615	12 12 10 10 13 15 6



Part Number	Ordering Code: LTC-ISB1-{SLED}-{FT}-(DOP}-(SC)-{FWHM}-{CW}-(LOP)	SLED [nm]	FT	SC [nm]	FWHM [nm]	CW [nm]	LOP [mW]
ASM002701	LTC-ISB1-1300-SM-LP-1270_1330-60-1300-12	1300	SM	1270-1330	60	1300	12
ASM002702	LTC-ISB1-1340-SM-LP-1310_1370-60-1340-12	1340	SM	1310-1370	60	1340	12
ASM002703	LTC-ISB1-1390-SM-LP-1360_1420-60-1390-10	1390	SM	1360-1420	60	1390	10
ASM002704	LTC-ISB1-1430-SM-LP-1410_1450-40-1430-10	1430	SM	1410-1450	40	1430	10
ASM002705	LTC-ISB1-1480-SM-LP-1455_1505-50-1480-13	1480	SM	1455-1505	50	1480	13
ASM002706	LTC-ISB1-1550-SM-LP-1515_1585-70-1550-15	1550	SM	1515-1585	70	1550	15
ASM002707	LTC-ISB1-1615-SM-LP-1585_1645-60-1615-6	1615	SM	1585-1645	60	1615	6
ASM002708	LTC-ISB1-1680-SM-LP-1655_1705-50-1680-13	1680	SM	1655-1705	50	1680	8
ASM002709	LTC-ISB1-1550-SM-LP-1500_1600-70-1550-8	1550	SM	1500-1600	70	1550	8
ASM002712	LTC-ISB1-1550-SM-LP-1532_1568-35-1550-30	1550	SM	1532-1568	35	1550	30